



How it works



Setting up your Falcon Transmitter



1 Fix the aerial provided onto the back of the transmitter.



2 Plug the transmitter to the mains with the power cable provided.



3 Connect an audio source into the Phono socket using the cables provided. Play your audio.



4 Switch the transmitter on by sliding the directly button to Hi.



5 Assign a channel to the transmitter by pressing the channel button.



Troubleshooting
Check out the back of this sheet for tips on solving problems that you may run into.



a

Mic input
Direct input for microphone.
Only use SDK supplied microphones.

b

RCA audio input
Direct input for audio using RCA/Phono socket.

c

Power light
Indicates when transmitter is on/off.

d

USB input
USB for Silent Disco King use only. **DO NOT try to connect.**

e

Channel selector
Indicates what channel you're transmitting to.

f

DC input
Input for power adaptor to charge.

g

3.5 aux cable
3.5 aux cable to connect transmitter to audio device.

h

Power supply
9v power supply for the Falcon transmitter.

Troubleshooting!

No Audio?

- Check your audio device is working, connected correctly and playing music with the volume turned up full.
- Ensure receivers/headphones are switched on, connected to the correct channel and have the volume turned up.
- Try a different audio cable, failing that, try a different audio device.

No Power?

- Check the transmitter is plugged in and the red power light is illuminated.

Signal cuts out, interference or reduced range?

- If using two or more transmitters simultaneously, make sure each is on different channels (frequencies). You cannot use two transmitters on the same channel in the same place as they will cancel each other out.
- Make sure that the transmitter has a clear line of sight to the headphones and make sure there are no obstructions.
- Make sure the transmitter is in range of the headphones.



hello@silentdiscoking.com · silentdiscoking.com · @silentdiscoking

