




How it works



Setting up your Parakeet Transmitter

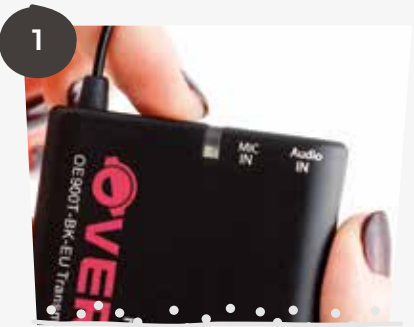

1 Press and hold the ON button to turn the transmitter on.



2 Connect to an audio source using the cables provided.



3 Connect a Silent Disco King approved microphone.



4 Hold the channel button to assign a channel to the transmitter. The LED will display the colour of the channel you're transmitting to.



5 Turn your headphones on by pressing and holding down the on button.



Troubleshooting
Check out the back of this sheet for tips on solving problems that you may run into.



a

Power Button

Switches transmitter on and off.

b

Channel Indicator

LED illuminates to indicate the colour channel on the headphones.

c

Mic Input

Direct input for Silent Disco King supplied microphones only.

d

Audio input

Connect to audio device using the cable provided.

e

Channel selector

Indicates what channel you're transmitting to.

f

DC input

Input for mini-USB power adaptor for charging.

Troubleshooting!

No Audio?

- Check your audio device is working, connected correctly and playing music with the volume turned up full.
- Ensure receivers / headphones are switched on, connected to the correct channel and have the volume turned up.
- Try a different audio cable, failing that, try a different audio device.

No Power?

- Check the transmitter is fully charged and switched on.

Signal cuts out, interference or reduced range?

- Ensure there is no interference caused by other wireless equipment in the vicinity.
- If using two or more transmitters simultaneously, make sure each is on different channels (frequencies). You cannot use two transmitters on the same channel in the same place as they will cancel each other out.
- Make sure the transmitter is in range of the headphones.



hello@silentdiscoking.com · silentdiscoking.com · @silentdiscoking

